

INSTALLATION MANUAL MUSIC PACK X6

Ref.: 910055-0011 v1



easy-glider.com

1 Installation Music Pack

Required Components:

- Music Pack

Preparation:

Switch Off Easy-Glider .
Disassembly Plastic Covers.
Disconnect Batteries from Main Cable (Red/Black).

Picture 1



As displayed on Picture 1, there are two different brackets supplied with the music pack. The brackets differ in length.


Depending on the Easy-Glider Model you have, you need to select the suitable bracket length.

To find the suitable length, use the lose supplied bracket and simulate the installation.

The bend side of the bracket will be hooked onto the chassis (picture 2 (B)) and the hole must fit over the threaded bolt (picture 2 (A))

If the bracket does slide over the threaded bolt and the hook is locked in the chassis the bracket is correct.

Picture 2

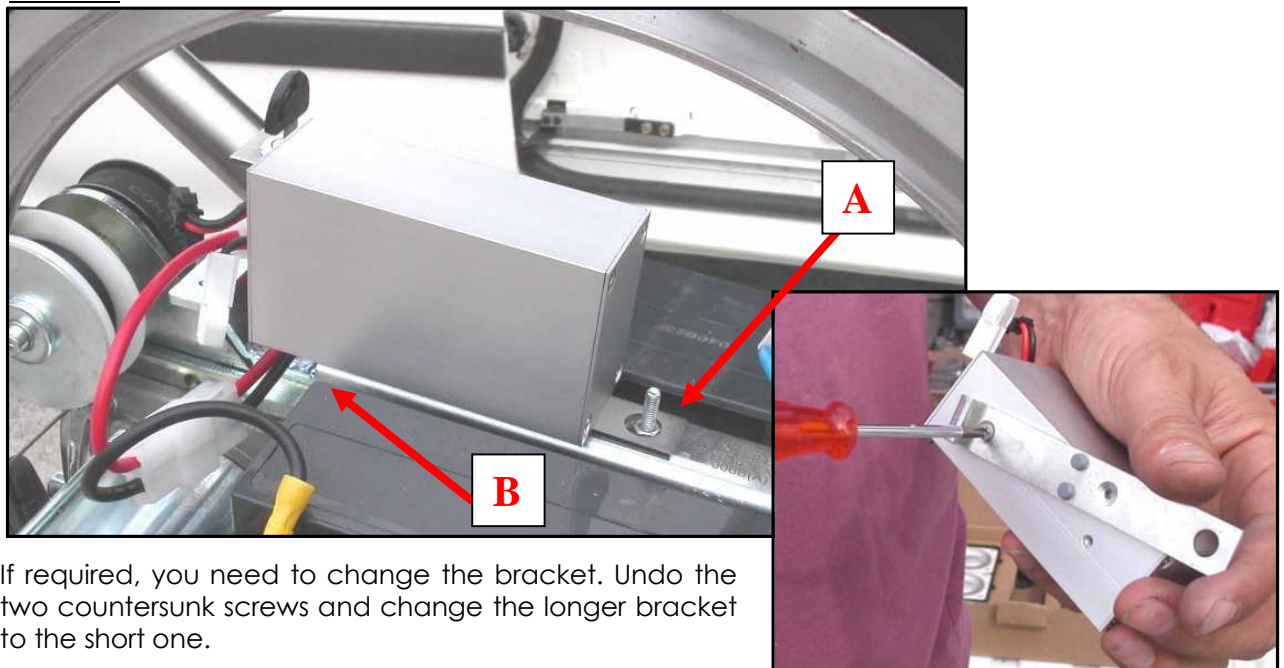

If required, you need to change the bracket. Undo the two countersunk screws and change the longer bracket to the short one.

INSTALLATION MANUAL MUSIC PACK X6


Ref.: 910055-0011 v1



easy-glider.com

2 Installation Music Pack (Continuation)

Picture 4

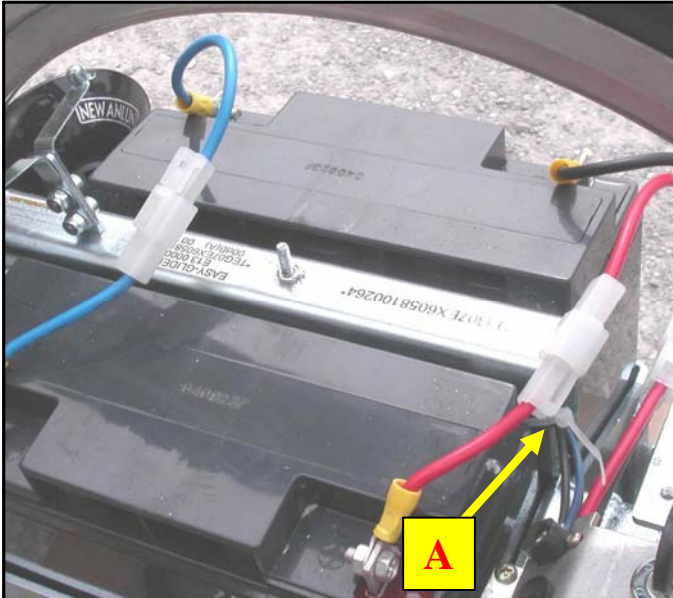

The cabling for the music pack are pre-installed and hidden in the centre of the chassis. (picture 4 (A))

There are 3 cables (2x black and 1x blue) The cables are fixed to the chassis with a cable tie. Cut the cable tie and pull out the cables.

Install now the Amplifier onto the chassis and fix it with the battery-holder and the knurled nut.

Picture 5



INSTALLATION MANUAL MUSIC PACK X6


Ref.: 910055-0011 v1



easy-glider.com


3 Installation Music Pack (Continuation)

Picture 5

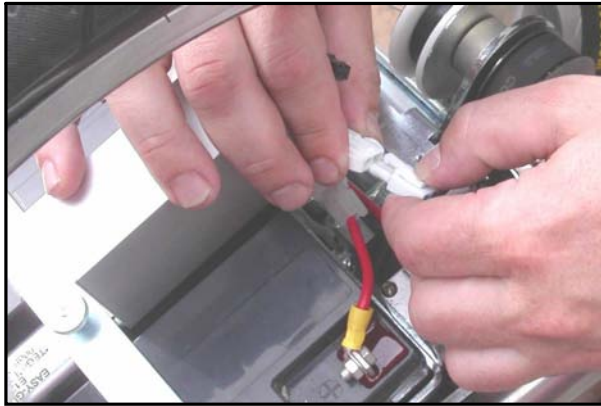


Connect the power supply to the amplifier.

Picture 6

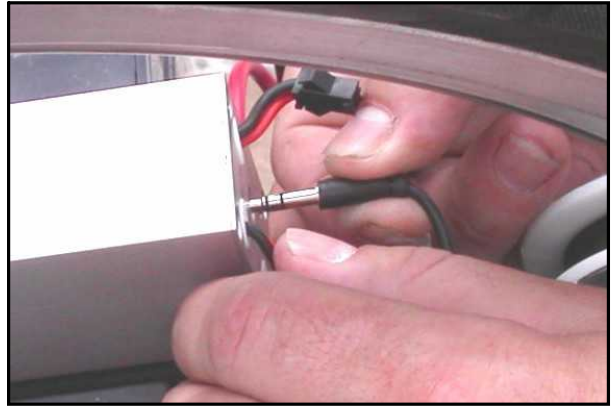

Connect the Input cable to the amplifier.


Picture 7

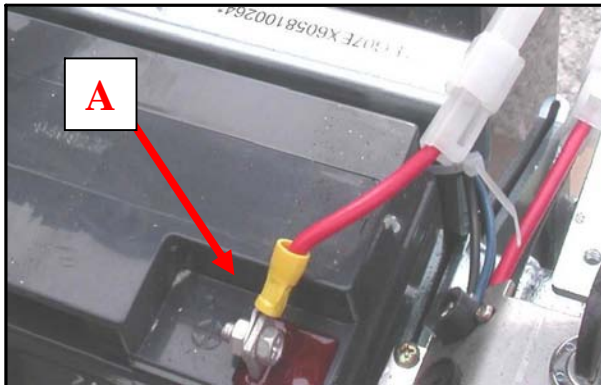

To provide more space for the speakers, you may need to bend the battery cables and their screwing connector flat (picture 7 (A)). Bend them away from the battery centre towards the outside (direction to the friction wheel and key switch).

If there is a collision between the battery cable and the speakers, the plastic cover will not close properly.

Picture 8

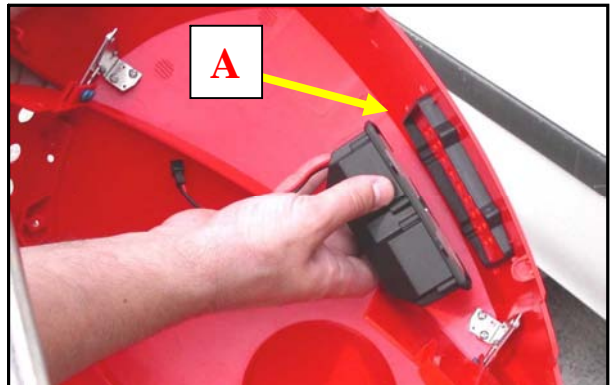

The speaker will be installed into the plastic covers. In the top part of the cover you will find the grey speaker frame (picture 8 (A)).

The speaker cables should point towards the front of the easy-glider (lights).

Install the speakers into the top plastic covers using the screws supplied with you music pack.

Re-assemble the plastic covers and connect your MP3 Player to the connector located at the side of the switchbox next to the throttle.

Be aware, that the main switch for the amplifier is located at the switchbox on the steering bar next to the light switch.